

User Manual for the Digital Adapter Remote Control



OCE-0189A REV 01 (08/25/16)

1 Welcome

The Digital Adapter Remote controls your digital adapter (DTA) and the Volume, Mute, Power, Input on many connected TVs.

2 Identifying the Digital Adapter in Your Home

This remote control is pre-programmed for the DTA 170HD and the DTA 271HD digital adapter models. Follow the instructions below if you want to use the remote to control the other adapter models, your TV or for advanced programming features. If you are unsure of your DTA model, check the front panel or bottom label of the DTA for one of the following types:

 
- Cisco/Technicolor DTA 271HD
- Cisco DTA 170HD
- Technicolor DCI401TWC2
- Arris/Motorola HD-uDTA
- Pace DC60Xu HD

This remote only works with the models listed above.


3 Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.

1. Remove the battery compartment cover on the back of your remote control.
2. Check battery polarity carefully, and install the batteries as shown in the illustration to the right.
3. Replace the battery compartment cover.



4 Get to know your Remote Control

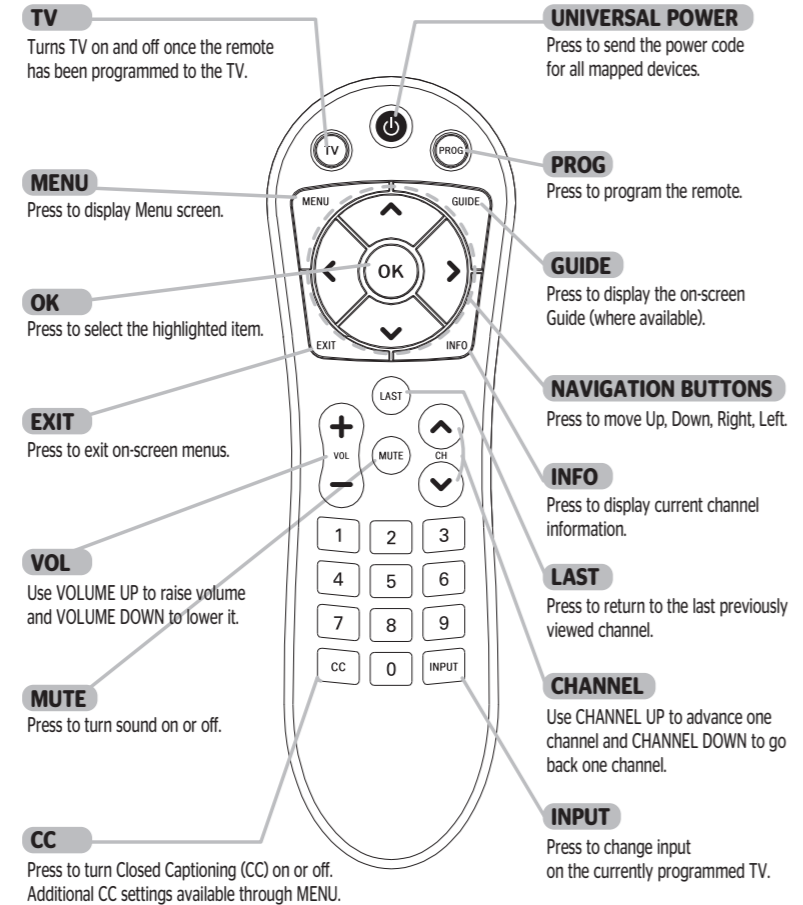

5 Program the Remote to Control Your Digital Adapter

A. Cisco/Technicolor DTA 271HD

No additional programming steps are required. Insert the batteries into your remote and it will work immediately with the DTA 271HD.

Want to place your DTA 271HD out of sight?

If you would like to keep your adapter out of sight and still get a remote signal, enable RF mode. Follow these steps, making sure that your DTA front panel is viewable by the remote control:

- Step1. Make sure that the DTA and TV are connected and powered on.
- Step2. Point remote at the DTA front panel.
- Step3. Press and hold the PROG button for five seconds, until the RED Power button lights up.
- Step4. Press and release the INFO button.
- Step5. The RED Power button will blink slowly indicating the remote is ready to be programmed.
- Step6. A message on the TV screen will prompt you to enter three (3) digits on the remote control.

If the three (3) digits entered are correct, a message on the TV screen will indicate successful programming. If the three (3) digits entered are incorrect, a message on the TV screen will indicate programming did not succeed.

B. Cisco DTA 170HD

No additional programming steps are required. Insert the batteries into your remote and it will work immediately with the DTA 170HD.

C. Technicolor DCI401TWC2

The steps below MUST be performed if your digital adapter is a Technicolor DCI401TWC2.

- Step1. Insert batteries into the remote.
- Step2. Press and hold the PROG button for five seconds, until the RED Power button lights up.
- Step3. Press [1], [0], [3] on the remote control keypad.

If the digital adapter code is valid, the RED Power button will blink twice and turn off.

After successfully completing steps 1-3 continue following the steps below, making sure that your DTA front panel is viewable by the remote control.

- Step4. Make sure that the DTA and TV are connected and powered on.
- Step5. Point remote at the DTA front panel.
- Step6. Press and hold the PROG button for five seconds, until the RED Power button lights up.
- Step7. Press and release the INFO button.
- Step8. The RED Power button will blink slowly indicating the remote is ready to be programmed.
- Step9. A message on the TV screen will prompt you to enter three (3) digits on the remote control.

If the three (3) digits entered are correct, a message on the TV screen will indicate successful programming. If the three (3) digits entered are incorrect, a message on the TV screen will indicate programming did not succeed.

Your remote is now programmed to work with your DTA. The DTA can be placed out of sight and your remote will continue to control its behavior.

D. Arris/Motorola HD-uDTA

The steps below MUST be performed if your digital adapter is an Arris/Motorola HD-uDTA.

- Step1. Insert batteries into the remote.
- Step2. Press and hold the PROG button for five seconds, until the RED Power button lights up.
- Step3. Press [1], [0], [2] on the remote control keypad.

If the digital adapter code is valid, the RED Power button will blink twice and turn off.

Your remote is now programmed to work with your DTA.

Want to place your Arris/Motorola HD-uDTA out of sight?

If you would like to keep your DTA out of sight and still get a remote signal, enable RF mode.

- Step1. Make sure that the DTA and TV are connected and powered on.
- Step2. Point remote at the DTA front panel.
- Step3. Press and hold the PROG button for five seconds, until the RED Power button lights up.
- Step4. Press and release the INFO button.
- Step5. The RED Power button will blink slowly indicating the remote is ready to be programmed.
- Step6. A message on the TV screen will prompt you to enter three (3) digits on the remote control.

If the three (3) digits entered are correct, a message on the TV screen will indicate successful programming. If the three (3) digits entered are incorrect, a message on the TV screen will indicate programming did not succeed.

E. Pace DC60Xu HD

The steps below MUST be performed if your digital adapter is an Pace DC60Xu HD.

- Step 1. Insert batteries into the remote.
- Step 2. Press and hold the PROG button for five seconds, until the RED Power button lights up.
- Step 3. Press [1], [0], [4] on the remote control keypad.

If the digital adapter code is valid, the RED Power button will blink twice and turn off.

Want to place your Pace DC60Xu HD out of sight?

If you would like to keep your DTA out of sight and still get a remote signal, enable RF mode.

Follow these steps, making sure that your DTA front panel is viewable by the remote control:

- Step1. Make sure that the DTA and TV are connected and powered on.
- Step2. Point remote at the DTA front panel.
- Step3. Press and hold the PROG button for five seconds, until the RED Power button lights up.
- Step4. Press and release the INFO button.
- Step5. The RED Power button will blink slowly indicating the remote is ready to be programmed.
- Step6. A message on the TV screen will prompt you to enter three (3) digits on the remote control.

If the three (3) digits entered are correct, a message on the TV screen will indicate successful programming. If the three (3) digits entered are incorrect, a message on the TV screen will indicate programming did not succeed.

6 Program the Remote to Control Your TV (OPTIONAL)

If you would like to program your remote to control your TV power, input and volume, there are three methods:

- Quick Set-Up Method
- Manual Code Search
- Automatic Code Search

The Quick Set-Up Method enables the easiest set-up by using one-digit codes for up to 20 major brands. Manual code entry requires you to find your TV brand in the included list of three-digit TV set-up codes. Automatic mode can take up to 15

minutes and requires you to press a button when your TV responds to the remote control.

A. Quick Set-Up Method

- Step1. Make sure that the DTA and TV are connected and powered on.
- Step2. Locate your TV brand in the Quick Set-Up Code Table and identify the corresponding "Button Press" and "Button Number" values.
- Step3. Press and hold simultaneously for 3 seconds both the TV & MENU or TV & GUIDE buttons, as specified by the "Button Press" value your TV brand is assigned to. The RED Power button light will turn on for 20 seconds confirming that you are in the programming mode.
- Step4. While the RED Power button light is on, point the remote at the TV and press the "Button Number" assigned to your TV brand (e.g. for Sharp TV, key 5). The TV should turn off, if it does not, press the same number key repeatedly until the TV turns off.

*** Note: The remote will exit the programming mode automatically if it does not have matching codes and the RED Power button light will turn off.**

- Step5. Once the TV has turned off, press the TV key once again to save the code. The remote is now ready to control your TV. If the matching code could not be found in step 4, use the Manual Code search or the Automatic Code Search method.

Quick Set-Up Code Tables

TV		
Button Press	Button Number	Brand
TV&MENU	0	RCA
	1	SAMSUNG
	2	SONY
	3	LG
	4	VIZIO
	5	SHARP
	6	PANASONIC
	7	SANYO
	8	TOSHIBA
TV&GUIDE	0	COBY
	1	mitsubishi
	2	HITACHI
	3	MAGNAVOX
	4	JVC
	5	ZENITH
	6	INSIGNIA
	7	EMERSON
	8	WESTINGHOUSE
	9	TCL

B. Manual Code Search

- Step1. Make sure that the DTA and TV are connected and powered on.
- Step2. Locate your TV brand in the list of TV codes included in this instruction sheet.
- Step3. Point the remote at the TV.
- Step4. Press and hold the PROG button for five seconds, until the RED Power button

- lights up.
- Step5. Release the PROG button and make sure the RED Power button light stays on.
- Step6. Press and release TV button. The RED Power button will blink once and remain on.
- Step7. Find the three (3) digit TV code for your TV brand. Press the three (3) number buttons in order on the remote.

If the device code is valid, the RED Power button will blink twice and turn off. The device code will be retained. If the device code is invalid, the RED Power button will blink twice, but stay on. Input another three (3) digit code or cancel the process by pressing the "TV" button.

- Step8. If you are able to control TV power on/off and TV volume with the TV and VOL buttons on the remote you have successfully programmed your remote to your TV. If not, return to step 2 and try the next code for your TV brand.

While in programming mode, if a button is not pressed within 20 seconds, the remote will exit the process.

C. Automatic Code Search

If the code for your TV can't be found using the Manual Code Search, please try the Automatic Code search using the following steps:

- Step1. Make sure that the DTA and TV are

